

WARRANTY TERMS AND CONDITIONS

Stove Kraft Limited warrants to the purchaser of products for a period of 2 Years commencing from the date of invoice, the company will repair or replace free of charge any part or parts of the product, should the company be fully satisfied in its sole discretion, that the defect/s is/are due to faulty material or workmanship only. The warranty will be governed by the following clauses.

- 1) The company or their Authorised Service Agent will repair / replace all parts that are failing due to faulty material or defective workmanship pertaining to the aboveproduct.
- 2) Only the Company or its Authorised Service Agent can service / repair or attend to install/reinstall the above product.
- 3) On-site warranty will be executed. The warranty will be executed at customer place / authorized dealer / service centers and in which the authorized representative is situated including outstation locations.
- 4) The warranty extended herein is in lieu of all implied conditions & warranties under the law and is confined to the repair or replacement of defective parts and does not cover any consequential or resulting liability, damage or loss arising from such defects. Further more, the warranty in no case shall extend to the payment or any monetary consideration whatsoever, of the replacement or return of the product as a whole.
- 5) This warranty excludes consumables, corrosive, plastic, rubber and glass components adding decorative value to the product.
- 6) The company is not liable to carry out any servicing work under the warranty.
- 7) The courts of competent Jurisdiction at Bangalore, Karnataka shall have exclusive Jurisdiction over all matters arising out of any disputes in relation to product.
- 8) Stove Kraft shall not be liable to replace or repair the good under the terms of warranty

where:

- a) The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer recommendation
- b) The appliance has been used on a voltage supply other than that stamped on the product.
- c) Repairs have been attempted by persons other than the company or their authorized service agent.

Imported & Marketed by

Stove Kraft Limited

An Iso 9001 : 2015 Certified Company

#81, Harohalli Industrial Area, Kanakapura Taluk, Ramanagara District - 562 112, Karnataka, India

for Customer Complaints, Contact:

Customer Care Address: Same as Above, Manager, Consumer Care Cell | Toll Free No.: 1800-425-66666

Email: Customercare@stovekraft.com | Website: www.stovekraft.com

Country of Origin: People's Republic Of China

 


BXCM0401IN

CONTENTS

Know Your Coffee Maker	1
Intended Use	2
Safety Instructions	2
Using Your Appliance	2
Safety Of Others	3
After Use	3
Inspection And Repairs	3
Electrical Safety	4
Extension Cables & Class 1 Product	4
Mains Plug Replacement	4
Additional Safety Instructions For Coffee Makers	5
Use	5
A. Make Espresso Coffee	6
B. Frothing Milk/ Make Cappuccino	7
Cleaning And Maintenance	8
Protecting The Environment	9
Trouble Shooting	10

KNOW YOUR COFFEE MAKER

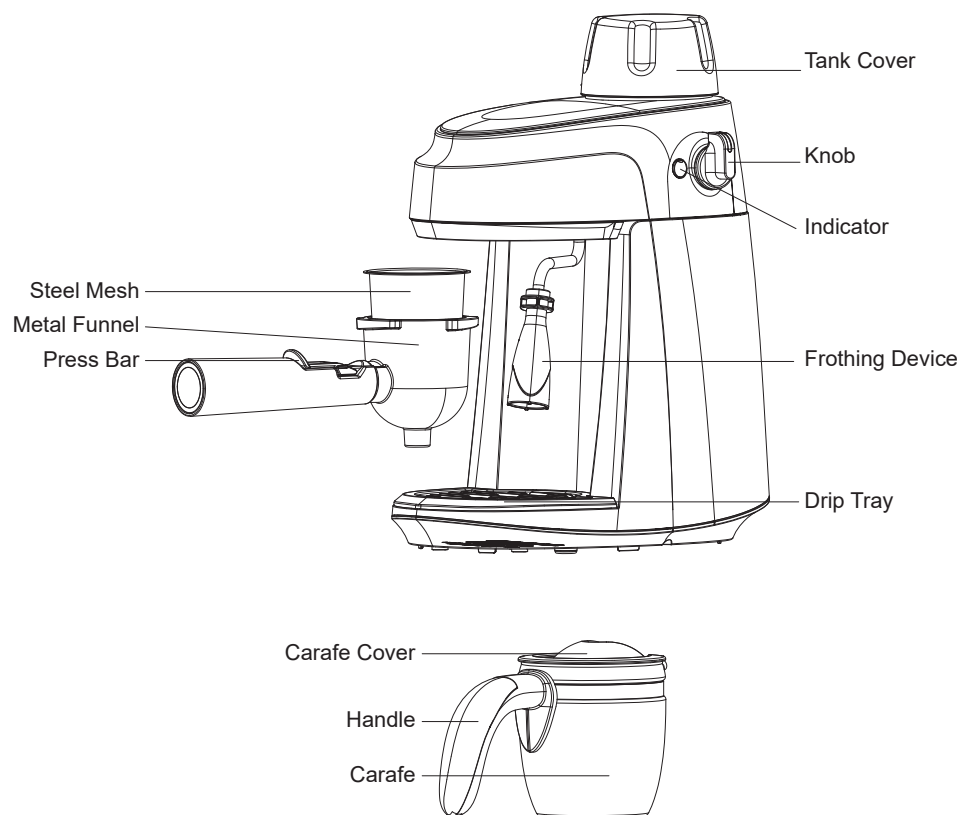

INTENDED USE

Your Black+Decker coffee maker has been designed for making coffee.

This product is intended for household use only. Thank you for choosing Black & Decker. We hope that you will enjoy using this product for many years.

Read this entire manual carefully before using the appliance.

SAFETY INSTRUCTIONS

Warning! When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock and personal injury.

- The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Retain this manual for future reference.

USING YOUR APPLIANCE

- Always take care when using the appliance.
- Do not use the appliance outdoors.
- Do not operate the appliance if your hands are wet. Do not operate the appliance if you are barefoot.
- Guide the power supply cord neatly so it does not hang over the edge of a worktop and cannot be caught accidentally or tripped over.
- Never pull the power supply cord to disconnect the plug from the socket. Keep the power supply cord away from heat, oil and sharp edges.
- If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- Disconnect the appliance from the power supply when not in use and before cleaning.

SAFETY OF OTHERS

- The appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

AFTER USE

- Switch off, remove the plug from the socket and let the appliance cool down before leaving it unattended and before changing, cleaning or inspecting any parts of the appliance.
- When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

INSPECTION AND REPAIRS

- Switch off the appliance before cleaning, changing accessories or approaching parts which move in use.
- Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- Do not use the appliance if any part is damaged or defective.
- Have any damaged or defective parts repaired or replaced by an authorized repair agent.
- Before use, check the power supply cord for signs of damage, ageing & wear.
- Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- If the power supply cord or mains plug is damaged or defective it must be repaired by an authorized agent in order to avoid a hazard. Do not cut the power supply cord and do not attempt to repair it yourself.
- Never attempt to remove or replace any parts other than those specified in this manual.

ELECTRICAL SAFETY

Before use, check that the mains voltage corresponds to the voltage on the rating plate.

This product must be earthed. Always check that the mains voltage corresponds to the voltage on the rating plate.

Appliance plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plug in any way. Do not use any adaptor plugs with earthed (Class 1) appliances. Unmodified plugs and matching outlets will reduce the risk of electric shock.

EXTENSION CABLES & CLASS 1 PRODUCT

- A 3 core cable must be used as your tool is earthed and of class 1 construction.
- Up to 30m (100 ft) can be used without loss of power. If supply cord is damaged, it must be replaced by the manufacturer or an authorized Black & Decker Service Centre in order to avoid a hazard.

MAINS PLUG REPLACEMENT

If a new mains plug needs to be fitted:

- Safely dispose of the old plug
- Connect the brown lead to the live terminal of the new plug
- Connect the blue lead to the neutral terminal
- If the product is class I (earthed), connect the green/yellow lead to the earth terminal.

Note: If your product is class II double insulated (only 2 wires in the cord set), no connection is to be made to the earth terminal.

Follow the fitting instructions supplied with good quality plugs.

Any replacement fuse must be of the same rating as the original fuse supplied with the product.

Warning! The above section on mains plug replacement is for authorized service centre personals

ADDITIONAL SAFETY INSTRUCTIONS FOR COFFEE MAKERS

Warning! The lid may become hot during use.

Warning! Steam may escape from the unit.

- Allow the appliance to cool before fitting or removing any parts and before cleaning.
- During use, the carafe and the hotplate can get very hot.
- Do not use the appliance if the carafe shows any signs of cracks.
- Do not immerse the appliance in liquid.

USE

Warning! Never use the appliance without water in the reservoir.

Before first use

- Unpack the coffee maker and remove all packaging, promotional materials and stickers. Remove all printed documents.
- Check that your mains supply is the same as the one indicated on the appliance.
- Position the appliance on a flat, stable work surface, away from the edge and other electrical appliances. Ensure that the coffee maker is not positioned under any cupboards or near furnishings, wallpaper or similar that could be damaged by hot steam.
- Wash all removable parts of the appliance in warm, soapy water. Rinse and dry thoroughly with a soft water. Rinse and dry thoroughly with a soft cloth. Do not use harsh/abrasive cleaners or place any part of the appliance in the dishwasher.

Warning! Never immerse the main body of the appliance, cord set or plug in water or any other liquid.

- We recommend that you first familiarize yourself with all parts of the appliance before using it for the first time. Do not fill the water or connect to the mains supply when doing this.
- To remove any remaining residue from the manufacturing process, we recommend operating the coffee maker as described in the 'Use' section. This will flush the appliance out. Use water only, do not add coffee.

Note! Ensure that the coffee maker mains cord does not overhang the edge of the worktop.

Note! When the coffee maker is plugged in and operated for the first time, there may be a small amount of smoke and/or odour as the heating elements warm up. This represents no danger or malfunction with the product and should be clear after a couple of uses.

A. MAKE ESPRESSO COFFEE

1. Remove the tank cover by turning it anti-clockwise and pour appropriate water in the tank. Do not exceed the maximum capacity of the carafe.

Note: 1. The carafe has marks with a maximum tank capacity of 4 cups and the minimum capacity of 2 cups.

2. Before pouring the water into the water tank, be sure the power cord is unplugged from the power outlet and the steam knob is in the OFF position.

2. Put the tank cover in place by turning clockwise until it locks in position.
3. Put the steel mesh into the metal funnel. Add coffee powder in the steel mesh with a measuring spoon. One spoon coffee powder can make about one cup of top-grade coffee.

Note: ① Select the quantity of coffee powder to make 2 or 4 cups of coffee.

② Please use coarse coffee powder for smooth operation.

4. Make sure the tubers on the funnel align with the grooves in the appliance and then insert the funnel and place it rightly in the "INSERT" position. You can fix the funnel into the coffee maker firmly by turning it anti-clockwise until it is locked in the "LOCK" position (see Fig. 1).

5. Place the carafe on the removable tray.

6. Plug the power cord into the socket.

7. Turn the steam knob to ON position, and the indicator is illuminated. Wait for about 2 minutes, till the coffee starts flowing out.

 
8. After the desired coffee is ready,

I. Turn steam knob to OFF position.

II. The indicator goes off and the coffee maker stops working.

III. Your coffee is ready now.

IV. Remove the carafe and turn the steam control knob to OFF position and release the residual steam in the tank.

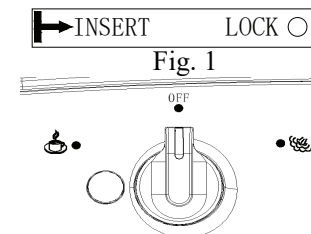

WARNING: Do not leave the coffee maker unattended while making your coffee.

9. Before removing the steel mesh or opening the tank cover, make sure the pressure in the tank is released. The method is to turn the steam knob to the OFF position first. The steam in the tank will eject from the frothing device. After the pressure is released, wait for the steel mesh to cool down before removing it or opening the tank cover.

10. After the coffee is made, take out the funnel by turning clockwise and remove the residual coffee from the steel mesh. Once cool, rinse it with running water and assemble it back.

B. FROTHING MILK/ MAKE CAPPUCCINO

You get a cup of cappuccino when you top up a cup of espresso with frothing milk.

Method:

1. Prepare espresso in a cup big enough as mentioned above.
2. Fill a jug with desired amount of milk for each cup of cappuccino to be prepared. You are recommended to use whole milk at a normal / cold temperature.
Note: In choosing the size of jug, it is recommended that the diameter is not less than 7035mm, as volume of milk is likely to increase.
3. Turn the steam knob to the ●☁ position, the indicator will light up.
4. Insert the frothing device into the milk about two centimeters for 2 minutes and the steam will come out from the frothing device.
Note: Please do not fill too much water (should be ≤150ml), or else steam output will be little and the water content in frothing milk will be too much.
5. When the required purpose is served, you can turn the steam control knob to ●☁ position and stop frothing. Remove the jug and turn the steam control knob to OFF position and release the residual steam in the tank.
Note: ① Clean steam outlet with wet sponge immediately after the steam stops generating.
② You can only open the tank cover after you drain the water and release the pressure.
6. Pour the frothed milk into the espresso prepared and your cappuccino is ready. To sweeten the taste, sprinkle the froth with a little cocoa powder.
Note: We recommend you allow the appliance to cool down before making coffee again.

CLEANING AND MAINTENANCE

1. Cut off power source and let the coffee maker cool down completely before cleaning.
2. Clean the housing of coffee maker with moisture-proof sponge often.
Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.
3. Detach the metal funnel after turning it clockwise, get rid of residual coffee inside and rinse with clean water.
4. Clean all the detachable attachments in the water and dry thoroughly.

 
TECHNICAL DATA

Model : BXCM0401IN
 Voltage : 220-240V AC, 50 Hz / 60 Hz
 Power : 800 W
 Weight : 1.83 Kg

PROTECTING THE ENVIRONMENT

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

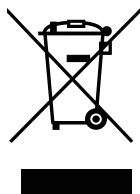

TROUBLE SHOOTING

Symptom	Cause	Corrections
The coffee maker is not getting switched on	The power is cut off	Plug the power cord into the power point. If the appliance still does not work, please contact the authorized service centre
Carafe leakage	The carafe is not placed properly	Let the centreline of the carafe align the position as recommended
	The level of water in the tank exceeds the Max level	The water level in the tank should be within Min and Max
The metal parts in the tank have rusted	Due to the quality of water	Use the descaler recommended by manufacturer
Water leaks from the bottom of the coffee maker	There is more water in the drip tray	Please clean the drip tray
	The coffee maker is not working properly	Please contact authorized service centre for support
Water leaks from filter.	Coffee powder on filter edge	Please clean the powder
Bad taste in your coffee.	Product is not cleaned properly	Clean coffee maker as recommended
	The coffee powder is stored in a hot, wet place for a long time. The coffee powder has turned bad	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a pack of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness
The steam is not getting frothed	The steam ready indicator (green indicator) is not illuminated	Only after the steam ready indicator (green indicator) is illuminated, the steam can be used to froth
	The container is too big	Use high and narrow cup
	You have used skimmed milk	Use whole milk or half-skimmed milk



WARRANTY REGISTRATION FORM

YOUR NAME _____

YOUR ADDRESS _____

POSTCODE _____

DATE OF PURCHASE _____

DEALERS NAME & ADDRESS _____



PRODUCT MODEL NO.
BXCM0401IN