

## WARRANTY TERMS AND CONDITIONS

Stove Kraft Limited warrants to the purchaser of products for a period of 2 Years commencing from the date of invoice, the company will repair or replace free of charge any part or parts of the product, should the company be fully satisfied in its sole discretion, that the defect/s is/are due to faulty material or workmanship only. The warranty will be governed by the following clauses.

- 1) The company or their Authorised Service Agent will repair / replace all parts that are failing due to faulty material or defective workmanship pertaining to the aboveproduct.
- 2) Only the Company or its Authorised Service Agent can service / repair or attend to install/reinstall the above product.
- 3) On-site warranty will be executed. The warranty will be executed at customer place / authorized dealer / service centers and in which the authorized representative is situated including outstation locations.
- 4) The warranty extended herein is in lieu of all implied conditions & warranties under the law and is confined to the repair or replacement of defective parts and does not cover any consequential or resulting liability, damage or loss arising from such defects. Further more, the warranty in no case shall extend to the payment or any monetary consideration whatsoever, of the replacement or return of the product as a whole.
- 5) This warranty excludes consumables, corrosive, plastic, rubber and glass components adding decorative value to the product.
- 6) The company is not liable to carry out any servicing work under the warranty.
- 7) The courts of competent Jurisdiction at Bangalore, Karnataka shall have exclusive Jurisdiction over all matters arising out of any disputes in relation to product.
- 8) Stove Kraft shall not be liable to replace or repair the good under the terms of warranty

where:

- a) The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer recommendation
- b) The appliance has been used on a voltage supply other than that stamped on the product.
- c) Repairs have been attempted by persons other than the company or their authorized service agent.

Imported & Marketed by

**Stove Kraft Limited**

An Iso 9001 : 2015 Certified Company

#81, Harohalli Industrial Area, Kanakapura Taluk, Ramanagara District - 562 112, Karnataka, India

for Customer Complaints, Contact:

Customer Care Address: Same as Above, Manager, Consumer Care Cell

Toll Free Number - 180042520202 | Email: [bd.customercare@stovekraft.com](mailto:bd.customercare@stovekraft.com)

Country of Origin: People's Republic Of China

 


**BXCM1201IN**


## **CONTENTS**

|  |   |
|--|---|
| Know Your Coffee Maker                           | 1 |
| Control Panel                                    | 1 |
| Intended Use                                     | 2 |
| Safety Instructions                              | 2 |
| Using Your Appliance                             | 2 |
| Safety Of Others                                 | 3 |
| After Use  | 3 |
| Inspection And Repairs                           | 3 |
| Electrical Safety                                | 4 |
| Extension Cables & Class 1 Product               | 4 |
| Mains Plug Replacement                           | 4 |
| Additional Safety Instructions For Coffee Makers | 5 |
| Use  | 5 |
| Using Your Coffee Maker                          | 6 |
| Automatic Start Function                         | 7 |
| Memory   | 7 |
| Cleaning And Maintenance                         | 8 |
| Hints For Great-tasting Coffee                   | 8 |
| Protecting The Environment                       | 9 |

## KNOW YOUR COFFEE MAKER

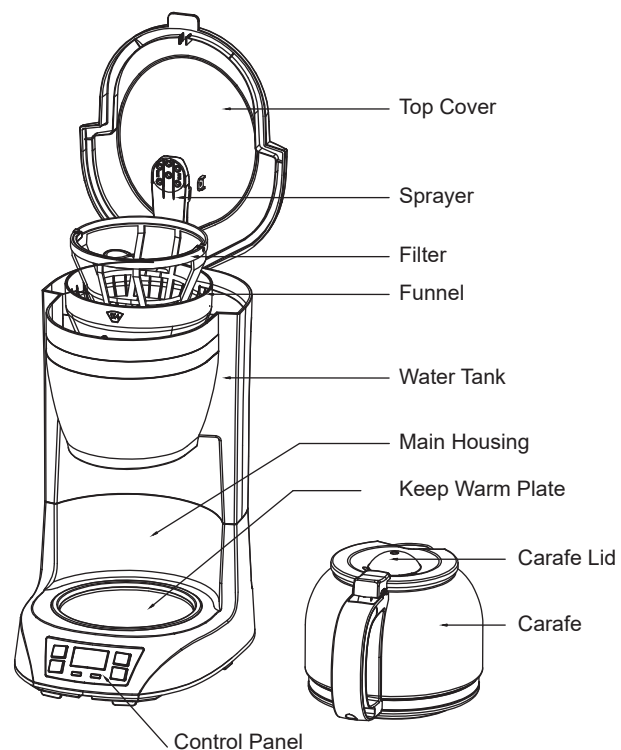

## CONTROL PANEL

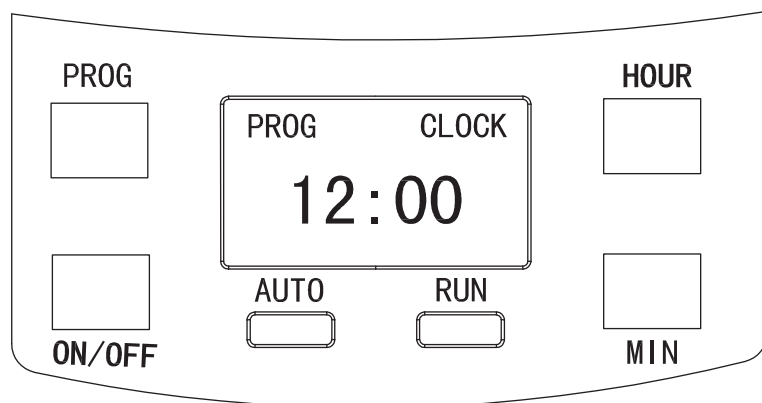 

## INTENDED USE

Your Black+Decker coffee maker has been designed for making coffee.

This product is intended for household use only. Thank you for choosing Black & Decker. We hope that you will enjoy using this product for many years.

Read this entire manual carefully before using the appliance.

## SAFETY INSTRUCTIONS

Warning! When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock and personal injury.

- The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Retain this manual for future reference.

## USING YOUR APPLIANCE

- Always take care when using the appliance.
- Do not use the appliance outdoors.
- Do not operate the appliance if your hands are wet. Do not operate the appliance if you are barefoot.
- Guide the power supply cord neatly so it does not hang over the edge of a worktop and cannot be caught accidentally or tripped over.
- Never pull the power supply cord to disconnect the plug from the socket. Keep the power supply cord away from heat, oil and sharp edges.
- If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- Disconnect the appliance from the power supply when not in use and before cleaning.

## SAFETY OF OTHERS

- The appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## AFTER USE

- Switch off, remove the plug from the socket and let the appliance cool down before leaving it unattended and before changing, cleaning or inspecting any parts of the appliance.
- When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.

## INSPECTION AND REPAIRS

- Switch off the appliance before cleaning, changing accessories or approaching parts which move in use.
- Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- Do not use the appliance if any part is damaged or defective.
- Have any damaged or defective parts repaired or replaced by an authorized repair agent.
- Before use, check the power supply cord for signs of damage, ageing & wear.
- Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- If the power supply cord or mains plug is damaged or defective it must be repaired by an authorized agent in order to avoid a hazard. Do not cut the power supply cord and do not attempt to repair it yourself.
- Never attempt to remove or replace any parts other than those specified in this manual.

## ELECTRICAL SAFETY

Before use, check that the mains voltage corresponds to the voltage on the rating plate.

This product must be earthed. Always check that the mains voltage corresponds to the voltage on the rating plate.

Appliance plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plug in any way. Do not use any adaptor plugs with earthed (Class 1) appliances. Unmodified plugs and matching outlets will reduce the risk of electric shock.

## EXTENSION CABLES & CLASS 1 PRODUCT

- A 3 core cable must be used as your tool is earthed and of class 1 construction.
- Up to 30m (100 ft) can be used without loss of power. If supply cord is damaged, it must be replaced by the manufacturer or an authorized Black & Decker Service Centre in order to avoid a hazard.

## MAINS PLUG REPLACEMENT

- If a new mains plug needs to be fitted:
- Safely dispose of the old plug
- Connect the brown lead to the live terminal of the new plug
- Connect the blue lead to the neutral terminal
- If the product is class I (earthed), connect the green/yellow lead to the earth terminal.

**Note:** If your product is class II double insulated (only 2 wires in the cord set), no connection is to be made to the earth terminal.

Follow the fitting instructions supplied with good quality plugs.

Any replacement fuse must be of the same rating as the original fuse supplied with the product.

**Warning!** The above section on mains plug replacement is for authorized service centre personals

## ADDITIONAL SAFETY INSTRUCTIONS FOR COFFEE MAKERS

**Warning!** The lid may become hot during use.

**Warning!** Steam may escape from the unit.

- Allow the appliance to cool before fitting or removing any parts and before cleaning.
- During use, the carafe and the hotplate can get very hot.
- Do not use the appliance if the carafe shows any signs of cracks.
- Do not immerse the appliance in liquid.

## USE

**Warning!** Never use the appliance without water in the reservoir.

### Before first use

- Unpack the coffee maker and remove all packaging, promotional materials and stickers. Remove all printed documents.
- Check that your mains supply is the same as the one indicated on the appliance.
- Position the appliance on a flat, stable work surface, away from the edge and other electrical appliances. Ensure that the coffee maker is not positioned under any cupboards or near furnishings, wallpaper or similar that could be damaged by hot steam.
- Wash all removable parts of the appliance in warm, soapy water. Rinse and dry thoroughly with a soft water. Rinse and dry thoroughly with a soft cloth. Do not use harsh/abrasive cleaners or place any part of the appliance in the dishwasher.

**Warning!** Never immerse the main body of the appliance, cord set or plug in water or any other liquid.

- We recommend that you first familiarize yourself with all parts of the appliance before using it for the first time. Do not fill the water or connect to the mains supply when doing this.
- To remove any remaining residue from the manufacturing process, we recommend operating the coffee maker as described in the 'Use' section. This will flush the appliance out. Use water only, do not add coffee.

**Note!** Ensure that the coffee maker mains cord does not overhang the edge of the worktop.

**Note!** When the coffee maker is plugged in and operated for the first time, there may be a small amount of smoke and/or odour as the heating elements warm up. This represents no danger or malfunction with the product and should be clear after a couple of uses.

## USING YOUR COFFEE MAKER

1. Open the top lid and fill the water tank with purified drinking water. The water level should not exceed MAX level marked inside the tank.
  2. Place the funnel into the support and make sure it is assembled correctly. Then put the filter correctly.
  3. Add coffee powder into filter. Usually a cup of coffee need a level spoon of coffee powder, but you may adjust according to your personal taste. Then close the top lid.
  4. Place the carafe on the keep warm plate.
  5. Plug the power cord into the socket. The LCD will display "12:00" and the screen will flash.
  6. Press ON//OFF button, the "RUN" indicator will be illuminated red. The appliance will begin working.
  7. The brewing process can be interrupted by pressing the ON//OFF button twice at any time during operation, and the brew indicator will be turned off and the "RUN" option on the LCD will disappear. The appliance will continue brewing once ON//OFF is pressed again.
- Note:** You can take out the carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.
8. Once the brewing is completed, take out the carafe to serve fresh brewed hot coffee.
- Note:** The coffee you get will be less than the water you have poured, as some water is absorbed by the coffee powder.
9. When the process is completed, if you do not wish to serve immediately, do not unplug the power and keep the switch ON. The coffee can be kept warm in the hot plate upto 40 min. For best taste, serve it just after brewing.
  10. Always turn the coffee maker off and unplug the power cord from the electrical outlet when the coffee maker is not in use.

## AUTOMATIC START FUNCTION

If you do not want the coffee maker to start operation immediately, for example at 5:10 pm, you want that the coffee machine to automatically start at 8:15 pm, please follow steps 1 to 5 of above section and then set the automatic start function as follows:

 


Fig.1



Fig.2

1. Press “PROG” button one time, the word “CLOCK” is shows up on the right side on display.
2. Press the “HOUR” and MIN button continuously to set the present time (real clock), that is 17:10 (See fig. 1).

**Note:** The time cycle is 24 hours.

3. Press “PROG” button once again and the word “TIMER” shows up on the left side of display.
4. Set the function time by pressing “HOUR” and “MIN” button repetitively, that is 20:15 (see Fig. 2).
5. Press the “ON/OFF” twice, the “AUTO” function is illuminated. After about 10 seconds, the LCD will display the current clock. You may see the automatic start time by pressing “PROG”.

**Note:** You may cancel the automatic start function by pressing “ON/OFF”. If you want to change the automatic start time, only follow the above 1-4 steps again.

When the time is due, the AUTO display will go off and the indicator “RUN” display turned on and the product starts brewing.

## MEMORY

If the power supply has been cut off or unplugged from the power cord unintentionally during operation, the appliance will continue previous operation automatically from the point when the disconnection occurred provided the pause does not exceed 15 sec. If the pwer cord has been accidentally unplugged from the power supply:

- a. The appliance will continue performing the previous operation provided the time does not exceed 15 sec. or,
- b. In the event the time exceeds 15 sec, the appliance has to be re-started with default setting.

## CLEANING AND MAINTENANCE

**CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

- 1) Clean all detachable parts after each use in hot, sudsy water.
- 2) Wipe the product’s exterior surface with a soft, damp cloth to remove stains.
- 3) Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
- 4) Use a damp cloth to gently wipe the keeping warm plate. Never use abrasive cleaner to clean it.
- 5) Replace all parts and keep for next use.

## HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section. Always use fresh purified water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a pack of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee’ flavor. Reheating coffee is not recommended as coffee is at its best flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffee is used.

 
## TECHNICAL DATA

Model : BXCM1201IN  
Voltage : 220-240V AC, 50 Hz / 60 Hz  
Power : 900W  
Weight : 2.62 Kg

## PROTECTING THE ENVIRONMENT

You can help protect the environment!

Please remember to respect the local regulations:  
hand in the non-working electrical equipments to an  
appropriate waste disposal center.

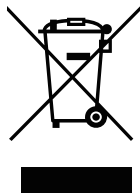

## WARRANTY REGISTRATION FORM

YOUR NAME \_\_\_\_\_

\_\_\_\_\_

YOUR ADDRESS \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

POSTCODE \_\_\_\_\_

DATE OF PURCHASE \_\_\_\_\_

DEALERS NAME & ADDRESS \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

PRODUCT MODEL NO.  
BXCM1201IN

