

WARRANTY TERMS AND CONDITIONS

Stove Kraft Limited warrants to the purchaser of products for a period of 2 Years commencing from the date of invoice, the company will repair or replace free of charge any part or parts of the product, should the company be fully satisfied in its sole discretion, that the defect/s is/are due to faulty material or workmanship only. The warranty will be governed by the following clauses.

- 1) The company or their Authorised Service Agent will repair / replace all parts that are failing due to faulty material or defective workmanship pertaining to the aboveproduct.
- 2) Only the Company or its Authorised Service Agent can service / repair or attend to install/reinstall the above product.
- 3) On-site warranty will be executed. The warranty will be executed at customer place / authorized dealer / service centers and in which the authorized representative is situated including outstation locations.
- 4) The warranty extended herein is in lieu of all implied conditions & warranties under the law and is confined to the repair or replacement of defective parts and does not cover any consequential or resulting liability, damage or loss arising from such defects. Further more, the warranty in no case shall extend to the payment or any monetary consideration whatsoever, of the replacement or return of the product as a whole.
- 5) This warranty excludes consumables, corrosive, plastic, rubber and glass components adding decorative value to the product.
- 6) The company is not liable to carry out any servicing work under the warranty.
- 7) The courts of competent Jurisdiction at Bangalore, Karnataka shall have exclusive Jurisdiction over all matters arising out of any disputes in relation to product.
- 8) Stove Kraft shall not be liable to replace or repair the good under the terms of warranty
where:
 - a) The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer recommendation
 - b) The appliance has been used on a voltage supply other than that stamped on the product.
 - c) Repairs have been attempted by persons other than the company or their authorized service agent.

For any customer complaints, please contact:
Stove Kraft Limited

81, Harohalli Industrial Area, Kanakapura Taluk, Ramanagara District, Bangalore Rural - 562 112
Manager, Consumer Care Cell | Toll Free No.: 1800-425-20202 | Email: bd.customer@stovekraft.com



FIRST USE SAFETY RECOMMENDATION

Please read through this booklet for safe and efficient use of the appliance. We urge you to read the "Hint's" section and follow all detailed instructions even if you are familiar with using this appliance.

Keep this guide handy for future reference.

BXT01901IN

CONTENTS


Important Safeguards	1
Know Your Oven	2
Intended Use	3
Safety Instructions	3
Using Your Appliance	3
Safety Of Others	4
After Use	4
Inspection And Repairs	4
Specific Safety Instructions For Toaster Ovens	5
Never Use The Following Items In Your Toaster Oven	5
Electrical Safety	6
Extension Cables & Class 1 Product	6
Additional Instructions For Your Toaster Oven	6
Use	6
Using Your Oven	7-8
Advantages Of Convection Oven Cooking	9
Cleaning And Maintenance	10
Protecting The Environment	11

IMPORTANT SAFEGUARDS

While using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should be followed, including the following:

- Read all instructions carefully, even if you are familiar with the appliance.
- To protect against the risk of electric shock, DO NOT IMMERSE the appliance, cord set or plug in water or other liquids.
- To clean, wipe the exterior with a damp cloth.
- Close supervision is necessary when any appliance is used near children. Never leave an appliance unattended when in use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
- Switch off and remove the plug from the power outlet when not in use before assembling or disassembling parts, cleaning or carrying out any maintenance of the appliance. Never pull the cord while unplugging out from power outlet.
- Do not operate the appliance if its damage in any manner. Return the complete appliance to your nearest authorized service facility for examination, electrical repair, mechanical repair or adjustments to avoid any hazard.
- The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
- Do not let the cord hang over the edge of a table, counter, or touch hot surfaces.
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surfaces
- Avoid touching hot surfaces, use handles and knobs.
- Do not operate or place any part of this appliance on or near any hot surfaces (such as gas or electric burner or in a heated oven).
- Do not abuse the cord. Never carry the appliance by the cord or yank it to disconnect it from the outlet; instead, grasp the plug and pull to disconnect.
- When using an extension cord with your appliance, make sure the extension cord is correctly wired, and rated for its use.
- The product is intended for household use only.
- Do not attempt to repair the appliance yourself; instead, contact Authorized Service Centre for repair.

KNOW YOUR OVEN

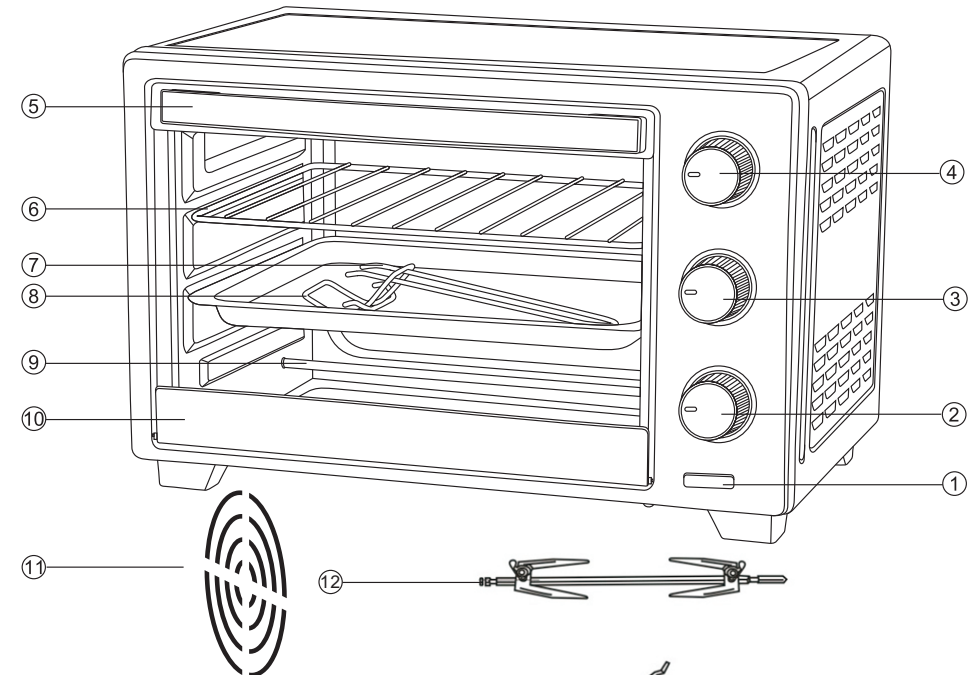

- 1. Oven Indicator**
- 2. Timer**
- 3. Operation Selector**
- 4. Temperature Selector**
- 5. Door Handle**
- 6. Bake Rack**
- 7. Bake Pan**
- 8. Tray Handle**
- 9. Heating Elements**
- 10. Bottom Door Clip**
- 11. Convection**
- 12. Rotisserie Rod**
- 13. Rotisserie Handle**
- 14. Barbeque Tray with 4 Skewer Rods**

INTENDED USE

Your Black+Decker toaster oven has been designed for toasting, baking etc. Your toaster oven should not be used for any other applications. This appliance is intended for indoor household use only.

SAFETY INSTRUCTIONS

Warning! /When using mains-powered appliances, basic safety precautions, including the following, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

- Read all this manual carefully before using the appliance.
- The intended use is described in this manual. The use of any accessory or attachment or the performance of any operation with this appliance other than those recommended in this instruction manual may present a risk of personal injury.
- Retain this manual for future reference.

USING YOUR APPLIANCE

- Make sure that the appliance is switched off before connecting to or disconnecting from the power supply.
- Always take care when using the appliance.
- Do not use the appliance outdoors.
- Never pull the power supply cord to disconnect the plug from the socket. Keep the power supply cord away from heat, oil and sharp edges.
- If the power supply cord is damaged during use, disconnect the appliance from the power supply immediately. Do not touch the power supply cord before disconnecting from the power supply.
- Disconnect the appliance from the power supply when not in use, before carrying out any maintenance, fitting or removing parts and before cleaning.

SAFETY OF OTHERS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or assistance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance.
- Do not allow children or any person unfamiliar with these instructions to use the appliance.
- Do not allow children or animals to come near the work area or to touch the appliance or power supply cord.
- Close supervision is necessary when the appliance is used near children.

AFTER USE

- Switch off and remove the plug from the socket before leaving the appliance unattended and before changing, cleaning or inspecting any parts of the appliance.
- When not in use, the appliance should be stored in a dry place. Children should not have access to stored appliances.


INSPECTION AND REPAIRS

- Before use, check the appliance for damaged or defective parts. Check for breakage of parts, damage to switches and any other conditions that may affect its operation.
- Do not use the appliance if any part is damaged or defective.
- Have any damaged or defective parts repaired or replaced by an authorized repair agent.
- Before use, check the power supply cord for signs of damage, ageing & wear.
- Do not use the appliance if the power supply cord or mains plug is damaged or defective.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent.
- Never attempt to remove or replace any parts other than those specified in this manual.

SPECIFIC SAFETY INSTRUCTIONS FOR TOASTER OVENS

Warning! Accessible parts may become hot when the appliance is in use. Children should be kept away.

The following symbols are found on your appliance:

-  Denote a hot surface.
- Always route the cord carefully to avoid a tripping hazard.
- Do not allow the cord set to hang over bench tops.
- Allow adequate space around and above the appliance for ventilation.
- Care must be taken when opening the appliance as hot air may escape on opening.
- The glass door and the outside surfaces of the oven get very hot during use. Oil and other cooking liquids may also get very hot during use. Always wear oven gloves when opening the glass door and when removing trays from the oven.
- Care should be taken to avoid touching heating elements inside the oven.
- Do not cover trays or other parts with metal foil as this may cause overheating.
- Surfaces may be hot during use and during the cool down period.
- Do not use a steam cleaner to clean this appliance.
- Never immerse the appliance, the cord set or the plug in liquid.

NEVER USE THE FOLLOWING ITEMS IN YOUR TOASTER OVEN

- Sealed containers such as sealed pouches or unopened cans.
- Glass lids on glass or metal bake-ware.
- Plastic wrapping or paperboard covers.
- Containers larger than those recommended (larger and higher containers will interfere with air circulation)
- Containers with specific warnings against use in ovens.

ELECTRICAL SAFETY



This product must be earthed. Always check that the power supply corresponds to the voltage on that rating plate.

Power plugs must match the outlet. Never modify the plug in any way. Do not use any adaptor plugs with earthed (Class 1) appliances. Unmodified plugs and matching outlets will reduce the risk of electric shock.

EXTENSION CABLES & CLASS 1 PRODUCT

A 3 core cable must be used as your appliance is earthed and of Class 1 construction. Up to 30m (100 ft) can be used without loss of power.

ADDITIONAL INSTRUCTIONS FOR YOUR TOASTER OVEN

- Metal, oven proof glass or glass ceramic bake-ware may be used in your oven.
- Follow manufacturer's instructions. When using deep oven proof glass or glass ceramic containers, make sure that the top edge of the container is at least 2.5 cm away from the upper heating element.
- Many prepared frozen foods are packaged in nonmetallic containers suitable for use in microwave ovens as well as regular ovens. Check the package. Instructions to determine if the container is suitable for use in a regular oven.
- When using these containers in toaster oven, always allow the oven to preheat for about 5 minutes before placing the ingredients inside.
- Remove any plastic wrapping and plastic or cupboard covers which may only be suitable for use in microwave ovens.
- Place the container holding the tray and cook according to the instructions or until the food is thoroughly heated.
- Never use these containers when cooking or top browning.

USE

- After cleaning, the tray can be lightly coated with butter, margarine or cooking fat.

USING YOUR OVEN

BEFORE USING THE OVEN FOR THE FIRST TIME:

- Wash all the oven accessories with mild dish detergent rinse thoroughly with clean water.
- Dry all accessories thoroughly and reassemble in the oven.
- Heat up the oven at MAX temperature for approximately 15 minutes to eliminate packing odour that may remain after shipping.


It is normal for the appliance to produce some smoke or a “new oven” smell when used for the first time. This is completely normal and will soon dissipate.

It is normal for the stainless steel sole to change colour during first uses. A slight noise produced by the expansion of the sole may be heard while oven temperature is increased.


HOW TO BAKE

1. Place the grill at the desired level.
2. Place the tray on the grill & close the oven door.
3. Turn the timer dial to the desired cooking time.

Using the timer: Turn the button all the way and dial back to the desired time.




4. Turn the Temperature Selector to the desired temperature.
5. Turn the Element Selector dial to the "" position
6. When finished baking, turn the Timer Selector to "0", to switch off the oven.

HOW TO BROIL

1. Insert the removable grill with food and the all-purpose pan
2. Turn the Element Selector dial to the position ""
3. Turn the Temperature Selector dial to the desired temperature.
4. Turn the timer dial to the desired cooking time.
5. When finished broiling, turn the Timer Selector to "0", to switch off the oven.

Remark: Keep a distance of at least 2 cm between food items and the top element.

HOW TO USE THE ROTISSERIE FUNCTION




1. Set the Temperature Selector to the desired temperature.
 2. Turn the Element Selector dial to the position ""
 3. Insert the pointed end of the Rod through one skewer, making sure the points of skewer face in the same direction as the pointed end of the rod. Slide skewer towards the square end of the rod and secure with a thumb screw.
 4. Place food to be cooked on the rod by running the Rod directly through the centre of the food.
 5. Place the second skewer into the other end of the Rod and secure with the thumbscrew.
 6. Check the food is centred on the Rod.
It is important that food items be well centred onto the rod because if the weight is not evenly distributed the cooking will not be ideal and undue stress will be placed on the motor.
 7. Insert the pointed end of the Rod into the drive socket and make sure the square end of the Rod rests on the support.
 8. Turn the Timer to the desired cooking time.
- Using the timer:** Turn the button all the way and dial back to the desired time.
9. Turn the function selector dial to  to start the rotisserie function.
- Remark: You can also turn the function selector button to  to combine the rotisserie and convection oven functions.*
10. When complete, turn the Timer to "0" to switch off.
 11. Turn the element selector dial, as well as the function selector button, to "OFF".
 12. Remove the rod by placing the hooks of the Rotisserie handle under the grooves on either side of the Rod. Lift the left side of the Rod first by lifting it up and out. Then pull the Rod out of the drive socket and carefully remove the roast from the oven.

ADVANTAGES OF CONVECTION OVEN COOKING

Convection oven cooking can be started after selecting the desired operation.

- It makes it easier to cook the food.
- The food's surface receives the heat more evenly.
- The food has a more attractive appearance.

OPERATION SELECTOR

1. Set the selector to “  ” position, convection function will be started.
2. Set the selector to “  ” position, rotisserie function will be started.
3. Set the selector to “  ” position, convection & rotisserie function will be started together.
4. Set the “ **OFF** ” position, all functions are disabled; only the heating elements are working.

CLEANING AND MAINTENANCE

CLEANING YOUR OVEN

Warning! Before cleaning the inside or outside of your oven, always turn the oven off, unplug it and let it cool.

Warning! Do not use solvents or any type of cleaning agent or cleaning pad unless recommended in this manual to clean the oven.

Warning! A Steam cleaner is not to be used to clean this appliance.

Warning! Do not touch the heating elements, even for cleaning.

- Clean the outside and the inside appliance with a damp cloth. Make sure that the appliance is dry on the inside and the outside before use.
- The best way to keep your oven clean is to wipe away spills, splatters and crumbs after each use.
- Only the rack and tray are dishwasher-safe.

GLASS DOOR

- **Warning!** Do not use a spray glass cleaner to clean the glass door.
- Clean the glass door with a damp, soapy cloth. Dry thoroughly before using the oven.

RACK AND TRAY

- Open the glass door, remove the tray
- Wipe away crumbs and food spills with a slightly damp cloth.
- Wipe the tray with damp cloth. Dry thoroughly before using the oven.
- Wash the rack in hot, soapy water or in a dish washer. To remove stubborn spots, use a polyester or nylon mesh pad.

DISCLAIMER

Updates to hardware components are made regularly. Therefore some of the instruction, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide for illustration purposes only and may not apply to particular situation. No legal right or entitlements may be obtained from the description made in this manual.

TECHNICAL DATA

Model : BXT01901IN
Voltage : 220-240V~ 50/60 Hz
Power : 1280W
Weight : 4.71 Kg

PROTECTING THE ENVIRONMENT

You can help protect the environment!

Please remember to respect the local regulations:
hand in the non-working electrical equipment to an
appropriate waste disposal center.



WARRANTY REGISTRATION FORM

YOUR NAME _____

YOUR ADDRESS _____

POSTCODE _____

DATE OF PURCHASE _____

DEALERS NAME & ADDRESS _____

PRODUCT MODEL NO.
BXT01901IN

